

# Kemerton Village Hall

Main Road, Kemerton, Tewkesbury, Glos GL20 7JE

[www.kemerton.org.uk](http://www.kemerton.org.uk)

Registered Charity No: 523159

VAT registration No: 310037957

**Treasurer** Mrs. Judith Woodman  
Email: [treasurer@kemerton.org.uk](mailto:treasurer@kemerton.org.uk)  
Tel: 07980-154492

**Secretary** Mr. Tom Ryder-Smith  
Email: [secretary@kemerton.org.uk](mailto:secretary@kemerton.org.uk)  
Tel: 07712-885880



## **Bookings**

Email: [bookings@kemerton.org.uk](mailto:bookings@kemerton.org.uk)

# KITCHEN APPLIANCE GUIDE



# CATERING DISHWASHER



**PLEASE NOTE: THE DISHWASHER TAKES ONE HOUR TO BE READY FOR USE ONCE YOU TURN IT ON.**

1. Open the cupboard to the right of the dishwasher and check that the two containers of chemicals connected by tubes to the dishwasher are **at least one-third full**. If they are not, top up the Detergent (Yellow) or Rinse -Aid (Blue) as required from the extra supply also located in the cupboard (not shown here).



2. Ensure the wall switch above the dishwasher is ON.



3. Ensure the drain plug is fully inserted and the strainer basket is in place. You may need to rotate the grey drain plug slightly to find the correct position. It should look like this.



4. Press in the round button on the far left to get the machine to fill with water. The green light will come on and you will hear the sound of water running water.



5. **After one hour** the orange READY light will come on, indicating the machine can be used.



6. Load the machine, having rinsed off any solids from plates. Crockery and glassware should ideally be washed in separate washes. If possible, load and wash glasses before loading and washing plates. Plates must be stacked with thin edges towards the front, as shown. Glasses must not overlap each other. Both racks can be used for crockery or glasses.



7. When you are all loaded up, close the door and press the start button.

The orange light will come on and washing sounds will start.

The cycle lasts for 3 minutes. When the machine falls silent, you can open the door, unload the dishwasher, and reload with dirty items.

Please **wait 4 minutes** before starting the next wash, as the water inside needs to reheat. You can do up to 30 washes using the same tank of water.



## 8. FINISHED WASHING ALL YOUR DIRTY DISHES?

When the machine has fallen silent following your final wash, **don't press any buttons yet.**

Open the door and remove the rack of clean items.

Remove the drain plug **ONLY**, leaving the sieve in place.



9. Close the machine door and press the power button once.



The water will immediately start draining from the machine, falling silent when draining is complete.

10. Any food particles will have become caught in the strainer basket. Lift the strainer basket out and wash clear of food particles in the main sink.



11. Replace the strainer and the drain plug, ensuring the drain plug is fully inserted (slight rotation may be needed).



12. Turn off the power at wall switch above the machine. Stack the empty racks inside the machine. Wipe down the exterior of the machine.


Please report any problems to the Committee on [bookings@kemerton.org.uk](mailto:bookings@kemerton.org.uk). Thank you.

# PLATE WARMING CUPBOARD



In the kitchen, under the serving hatch, you will find a warming cupboard. This works like a low temperature oven and can be used to keep food warm or to warm plates for your event.

First, ensure the labelled isolating switch is ON.

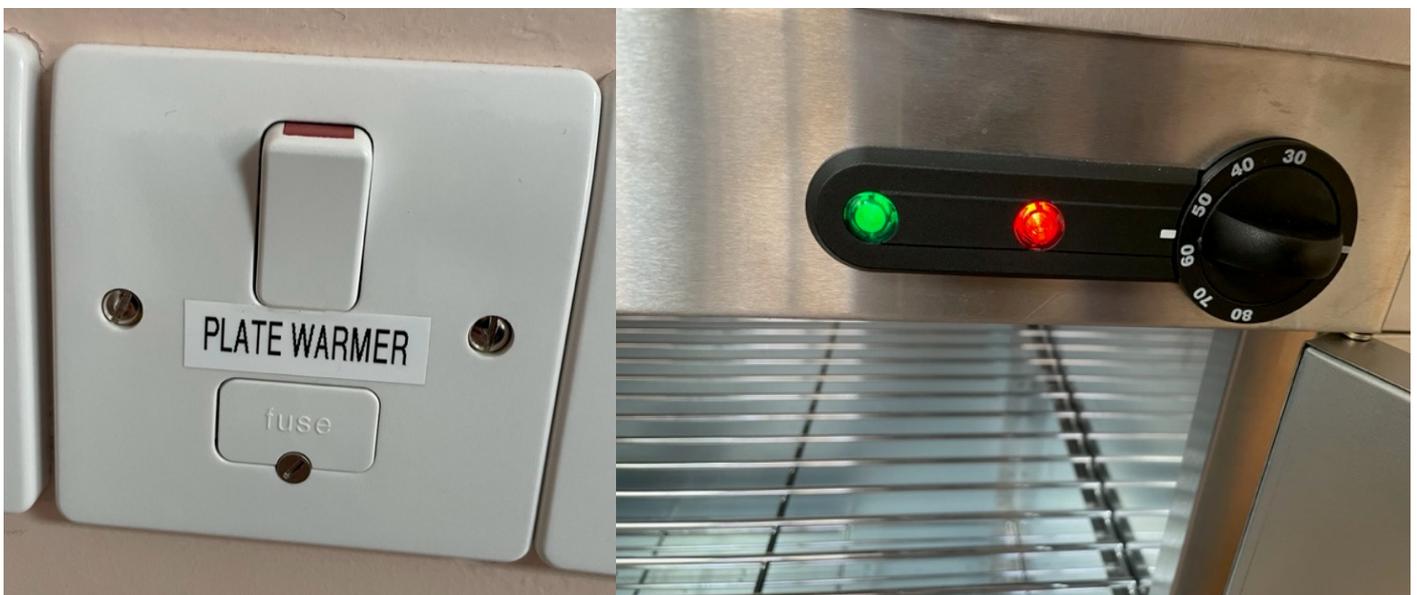

Turn the dial to your desired temperature. A red and green light will show. When the correct temperature is reached, the green light will turn off.

When you have finished using the appliance, ensure it is free of food particles and turn OFF both the dial and the wall isolator switch.

# OTHER APPLIANCES

The kitchen also contains the following self-explanatory appliances:

- Range cooker (5 gas hobs and single electric oven. Isolator switch on wall)
- Free-standing refrigerator
- Under-counter freezer (beside the fridge. Isolator switch on wall)
- Microwave (wall mounted)
- Extractor hood (over cooker)
- Additional extractor fan (turn on using switch on wall near sinks)

Note: Instruction manuals for all these appliances are located in the black file on the kitchen shelf. Please leave all appliances clean after your event.

